

awave

- 感谢阅读
- Thanks for your review

awave

A8

8" Powered Subwoofer


8寸 超重低音炮



User's Manual 使用说明


产品规格	A8
工作电压	+9-16VDC
额定功率	300W
总谐波失真	<0.05%
灵敏度	>105dB
低电平输入灵敏度	100mv-5v
低通滤波器	50Hz-150Hz
低音提升	0-12dB
相位开关	0°-180°
低音喇叭	8寸 2欧姆
尺寸（长x宽x高）毫米	445x235x295 mm

MODEL	A8
Working Voltage	+9-16VDC
RMS power	300W
THD	<0.05%
S/N(+A)	>105dB
LEVEL	100mv-5v
LP PASS	50Hz-150Hz
BASS EQ	0-12dB
PHASE	0°-180°
Subwoofer	8inch 2 ohm
Dimensions (LxWxH) mm	445x235x295 mm

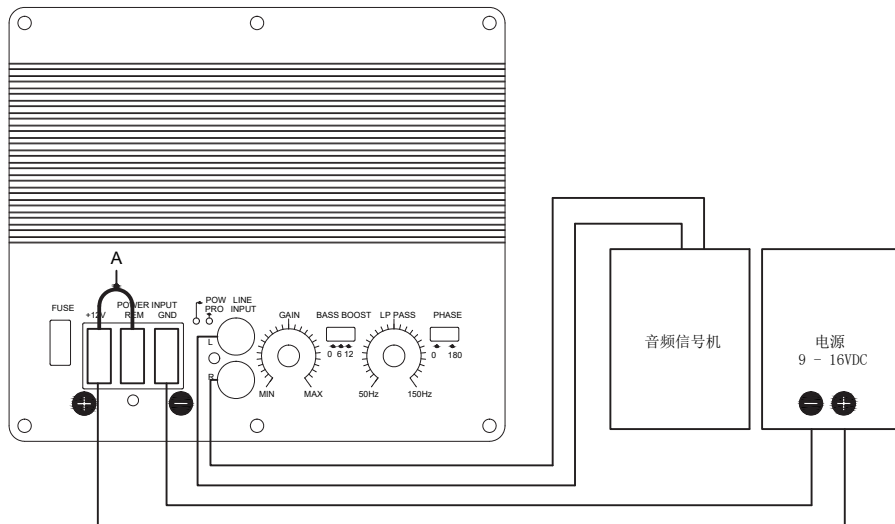

功放连接说明:

- 1: 先用1条18AWG的电线 (A) 将+12V与REM连接起来
- 2: 将+12V与电源 (9-16V)的正极相接
- 3: 将GND与电源 (9-16V)的负极相接 电线连接后指示灯亮绿色表示功放已开始工作
- 4: 把功放上的“L” “R”与音频信号的“L” “R”相对应连接
- 5: 旋转GAIN旋钮, 选择适当的音量
- 6: 根据需求适当旋转“LP PASS” “PHASE” “BASS BOOST”

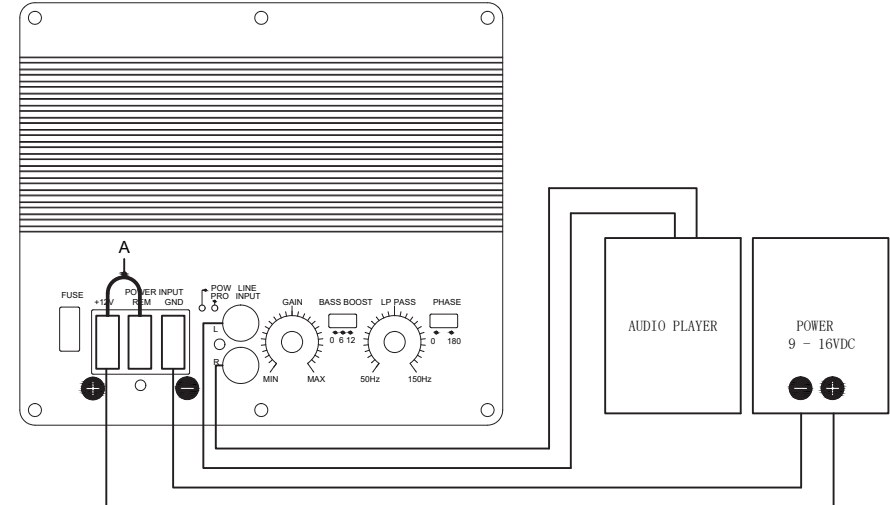

Amplifier connect instructions:

- 1: Connect "+12V" to REM with 18AWG cable;
- 2: Connect "+12V" to the positive side of power supply(9-16V);
- 3: Connect GND to the negative side of power supply(9-16V). The indicator light turns green shows that amplifier is working properly.
- 4: "L", "R" terminal on amplifier should be connected to "L", "R" on audio player.
- 5: Turn the "GAIN" knob to adjust volume level;
- 6: Turn "LP PASS" "PHASE" "BASS BOOST" knob to suit your needs.